

● PWR ● WTR ● HTR

⚠ DANGER
 Hazardous Voltage.
 Turn off power
 before opening
 cover. Serviceable
 only by licensed
 electricians.

⚠ DANGER
 Tension électrique
 dangereuse. Couper
 l'alimentation avant
 l'ouverture du
 couvercle. Entretien par
 un électricien qualifié
 agréé uniquement.

mr.steam®

Feel Good Inc.®

⚠ WARNING

- Do not install shutoff valve on the steam outlet
- Do not install in any locations where water can freeze
- Not for space heating purposes
- See installation instructions
- For residential use only

↑ Generator must be installed with arrow facing up. Generator must be level from side to side and front to back.

⚠ AVERTISSEMENT

- Ne pas installer les raccords de la valve d'arrêt sur la sortie de la vapeur
- Ne pas installer dans des endroits où l'eau pourrait geler
- A ne pas utiliser comme appareil de chauffage
- Voir guide d'installation
- Pour un usage résidentiel

↑ Le générateur doit être installé en ayant la flèche pointant vers le haut. Le générateur doit être mis au niveau de chaque côté et de l'avant à l'arrière.

CUSTOMER & TECH SUPPORT

800-234-2669
 1-800-234-2669
 1-800-234-2669

949-234-2669
 949-234-2669
 949-234-2669

QUICK SET UP GUIDE

GENERATOR | CONTROLS | ACCESSORIES



For illustrative purposes only.



CONTENTS

| | |
|----------------------------------------------------------|----|
| GENERATOR LOCATION | 5 |
| POWER CONNECTION | 6 |
| WATER FEED | 7 |
| STEAM OUTLET | 7 |
| DRAIN LINE | 7 |
| AUTOFLUSH® | 8 |
| CONDENSATION PAN | 9 |
| LIQUID LEVEL CONTROL BOARD | 9 |
| MAX GENERATOR INSTALLATION | 10 |
| GENERATOR | 11 |
| STEAM CONTROL LOCATION | 15 |
| iSTEAM®X STEAMHEAD INSTALLATION LOCATION | 16 |
| iSTEAM®X CONTROL INSTALLATION | 17 |
| AIRTEMPO® CONTROL INSTALLATION | 19 |
| AIRTEMPO® WIRELESS RECEIVER/ FLUSH MOUNT INSTALLATION | 20 |
| iTEMPO® OR ITEMPO/PLUS® CONTROL INSTALLATION | 23 |
| REMOTE TEMPERATURE PROBE INSTALLATION | 24 |
| CONTROL CABLE TO THE STEAM GENERATOR CONNECTION | 26 |
| AROMASTEAM SYSTEM | 29 |
| AROMASTEAM STEAMHEAD | 31 |
| USING ESSENTIAL OILS | 32 |
| LINEAR STEAMHEAD | 33 |
| FACEPLATE | 35 |
| DIVERTER | 35 |
| AROMATRAY | 36 |
| CHROMASTEAM®X | 37 |
| CHROMASTEAM72 | 40 |
| AUDIO@HOME | 41 |
| MS-SPEAKER | 42 |
| SHOWER SEAT | 44 |
| STEAMLINX® MOBILE APP | 46 |
| TYPICAL INSTALL OF DREAM PACKAGE SCHEMATIC | 48 |

KEY SIGNAL WORDS

⚠️ **WARNING** As you follow these instructions, you will notice warning and caution symbols. This blocked information is important for the safe and efficient installation and operation of this generator. These are types of potential hazards that may occur during installation and operation:

⚠️ **WARNING** Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

⚠️ **CAUTION** Indicates a potentially hazardous situation, which, if not avoided may result in minor or moderate injury or product damage.

IMPORTANT NOTE: This highlights information that is especially relevant to a problem-free installation.

All information in these instructions is based on the latest product information available at the time of publication. MrSteam reserves the right to make changes at any time without notice. More current instructions may be available at www.mrsteam.com.

⚠️ **WARNING** The information in this guide is designed to provide a general overview of how MrSteam® products are installed. All images and diagrams are for illustrative purposes only and may have been altered for presentation purposes. NEVER use this document for the Installation, Operation or Maintenance of any MrSteam® product. For installation, operation and maintenance information and instructions, only use the applicable MrSteam® Installation, Operation & Maintenance Manual(s). The specific Installation, Operation & Maintenance manual that is supplied with each MrSteam® product contains important information required for the safe and reliable installation and operation of the product. Failure to install any MrSteam® product according to the applicable manual may result in property damage, an inoperable system/control, or hazardous condition. If you do not have the applicable Installation, Operation & Maintenance manual please contact MrSteam® for a free copy, or download a copy from www.mrsteam.com. If you have any questions about the installation, operation or maintenance of any MrSteam® product please contact a customer or technical service representative using the contact information on the back cover of this guide or consult a properly licensed contractor, architect and/or design professional.

SUBJECT TO CHANGE WITHOUT NOTICE.



MR.STEAM® GENERATOR INSTALLATION

LOCATING THE MR.STEAM® GENERATOR

Select a location as near as practical to the steam room. Typical locations include: closet, vanity cabinet, climate controlled attic or basement.




Locate steambath generator as close to shower as possible.
30ft cable is included.
Optional 60ft cable available
*See control section for special control cable installation.

⚠WARNING The information in this guide is designed to provide a general overview of how MrSteam® products are installed. All images and diagrams are for illustrative purposes only and may have been altered for presentation purposes. NEVER use this document for the Installation, Operation or Maintenance of any MrSteam® product. For installation, operation and maintenance information and instructions, only use the applicable MrSteam® Installation, Operation & Maintenance Manual(s). The specific Installation, Operation & Maintenance manual that is supplied with each MrSteam® product contains important information required for the safe and reliable installation and operation of the product. Failure to install any MrSteam® product according to the applicable manual may result in property damage or an inoperable or hazardous condition. If you do not have the applicable Installation, Operation & Maintenance manual please contact MrSteam® for a free copy, or download a copy from www.mrsteam.com. If you have any questions about the installation, operation or maintenance of any MrSteam® product please contact a customer or technical service representative using the contact information on the back cover of this guide or consult a properly licensed contractor, architect and/or design professional.

FIELD POWER SUPPLY CONNECTION

Please refer to the wiring diagram in the Mr.Steam Installation Manual for complete wiring information.

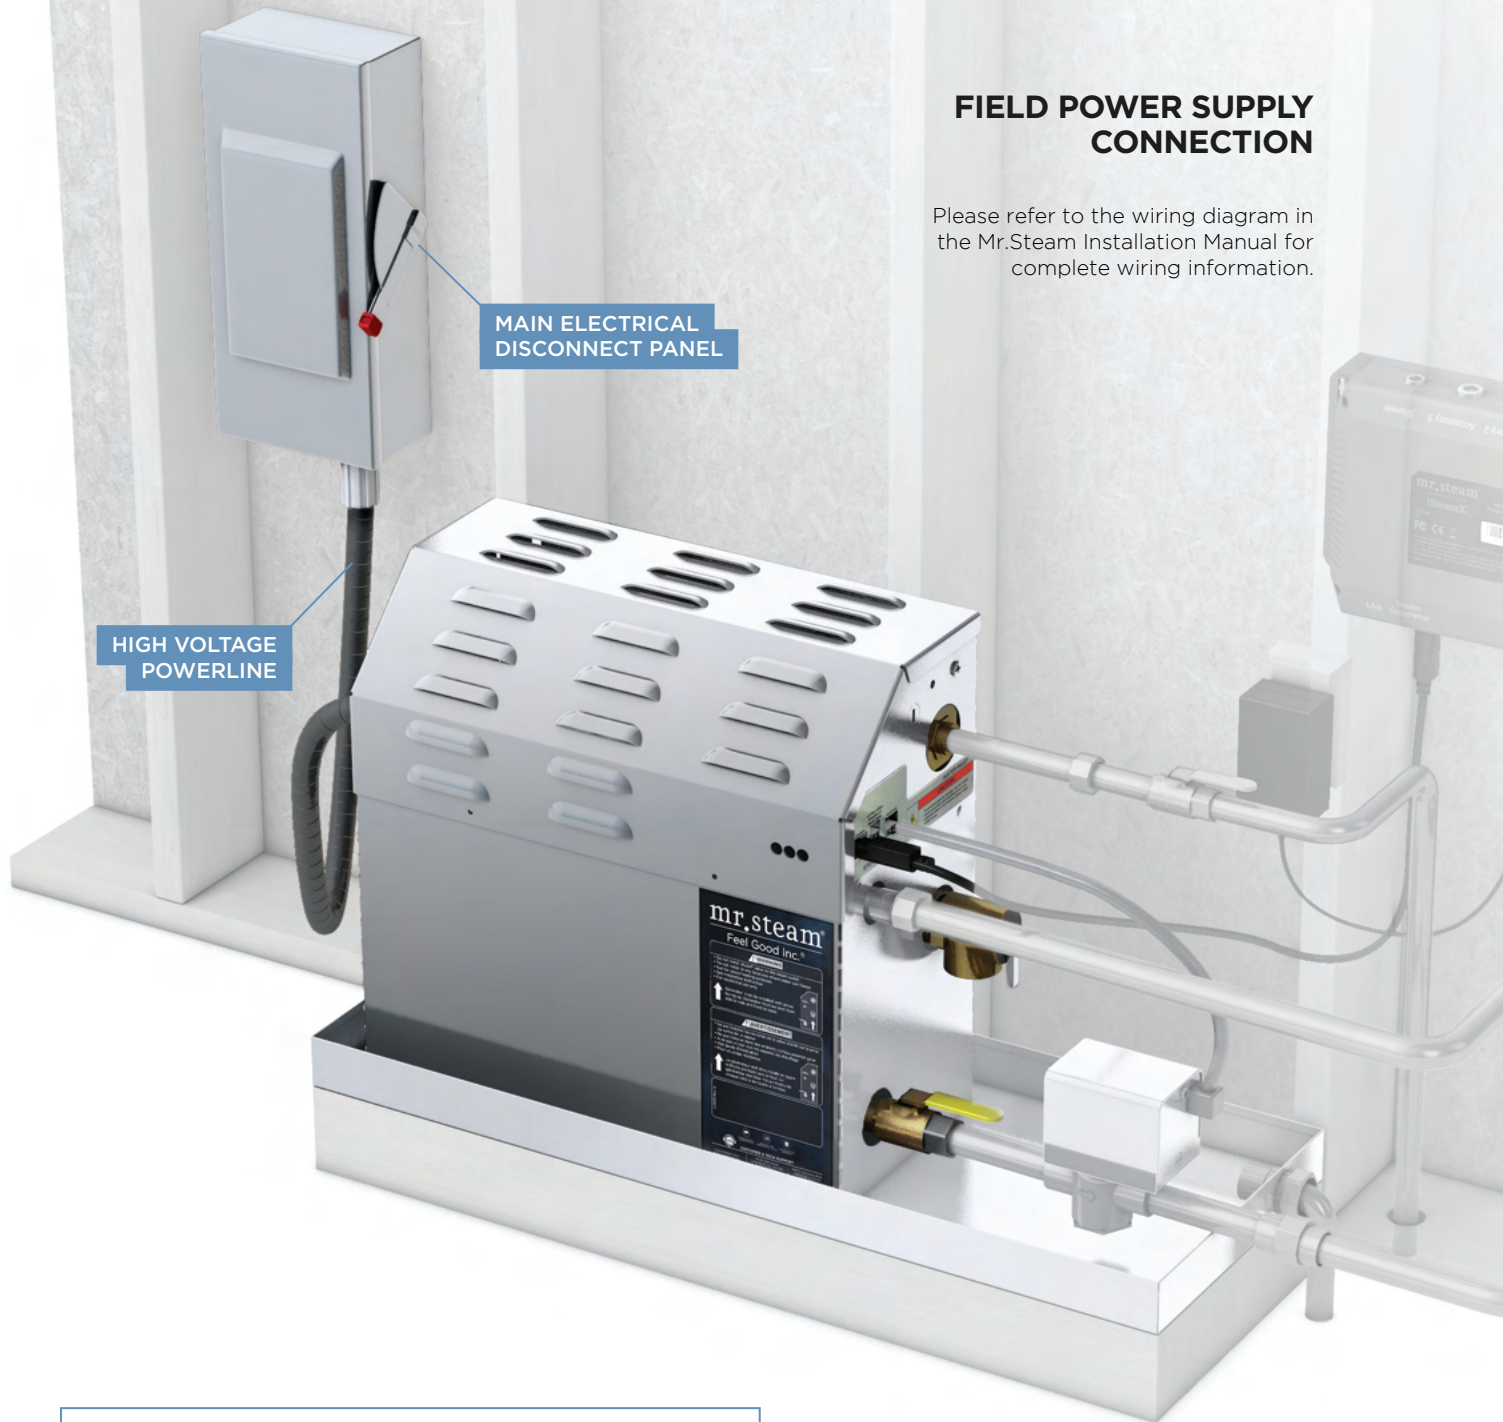

**TO AVOID EQUIPMENT DAMAGE DO NOT CONNECT
POWER SUPPLY DIRECTLY TO THE HEATING ELEMENTS!!!**

⚠WARNING The information in this guide is designed to provide a general overview of how MrSteam® products are installed. All images and diagrams are for illustrative purposes only and may have been altered for presentation purposes. NEVER use this document for the Installation, Operation or Maintenance of any MrSteam® product. For installation, operation and maintenance information and instructions, only use the applicable MrSteam® Installation, Operation & Maintenance Manual(s). The specific Installation, Operation & Maintenance manual that is supplied with each MrSteam® product contains important information required for the safe and reliable installation and operation of the product. Failure to install any MrSteam® product according to the applicable manual may result in property damage or an inoperable or hazardous condition. If you do not have the applicable Installation, Operation & Maintenance manual please contact MrSteam® for a free copy, or download a copy from www.mrsteam.com. If you have any questions about the installation, operation or maintenance of any MrSteam® product please contact a customer or technical service representative using the contact information on the back cover of this guide or consult a properly licensed contractor, architect and/or design professional.


WATER FEED

1. Connect to cold water line.
2. Provide a shut off valve, and a copper or brass union on the water supply line.
3. Flexible copper tubing, braided hose, PVC or PEX if permissible by local codes.



STEAM OUTLET PIPE


1. Provide a 1/2" copper or brass union on steam line.
2. Pitch steam line 1/4" per foot towards steam head or steam generator to avoid valleys and trapping of condensate.

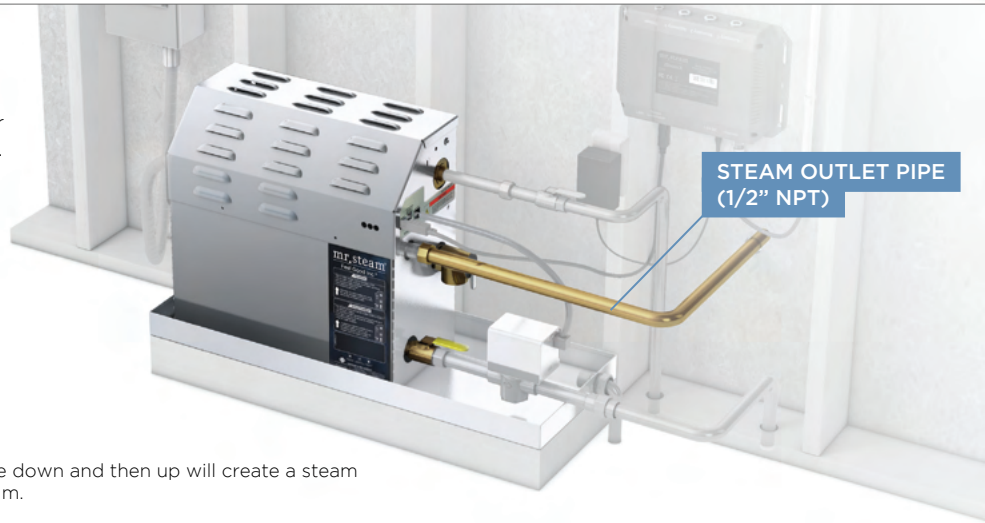

NOTE: Running the steam line down and then up will create a steam trap blocking the flow of steam.

MANUAL DRAIN LINE

1. Drain (1/2" NPT).
2. Unit drains by gravity.
3. Provide 1/2" copper or brass union.

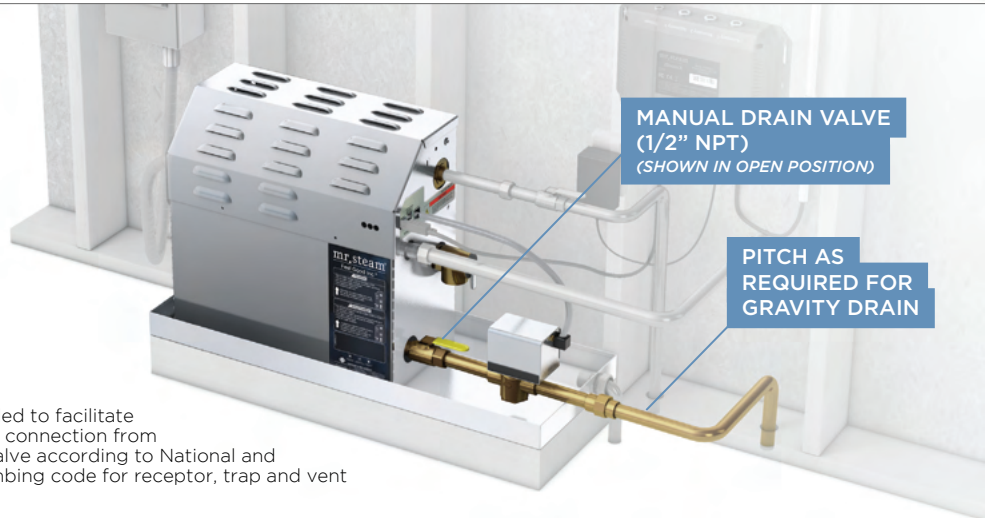


NOTE: A drain valve is provided to facilitate servicing. Provide a drain line connection from steambath generator drain valve according to National and local Codes. Check local plumbing code for receptor, trap and vent requirements.

⚠WARNING The information in this guide is designed to provide a general overview of how MrSteam® products are installed. All images and diagrams are for illustrative purposes only and may have been altered for presentation purposes. NEVER use this document for the Installation, Operation or Maintenance of any MrSteam® product. For installation, operation and maintenance information and instructions, only use the applicable MrSteam® Installation, Operation & Maintenance Manual(s). The specific Installation, Operation & Maintenance manual that is supplied with each MrSteam® product contains important information required for the safe and reliable installation and operation of the product. Failure to install any MrSteam® product according to the applicable manual may result in property damage or an inoperable or hazardous condition. If you do not have the applicable Installation, Operation & Maintenance manual please contact MrSteam® for a free copy, or download a copy from www.mrsteam.com. If you have any questions about the installation, operation or maintenance of any MrSteam® product please contact a customer or technical service representative using the contact information on the back cover of this guide or consult a properly licensed contractor, architect and/or design professional.

OPTIONAL AUTOFLUSH®


OPERATION

The optional AutoFlush® System automatically drains the Mr.Steam® system following each use. A time delay allows the water to cool down (about two hours) before it drains by gravity for a safe and gentle operation.

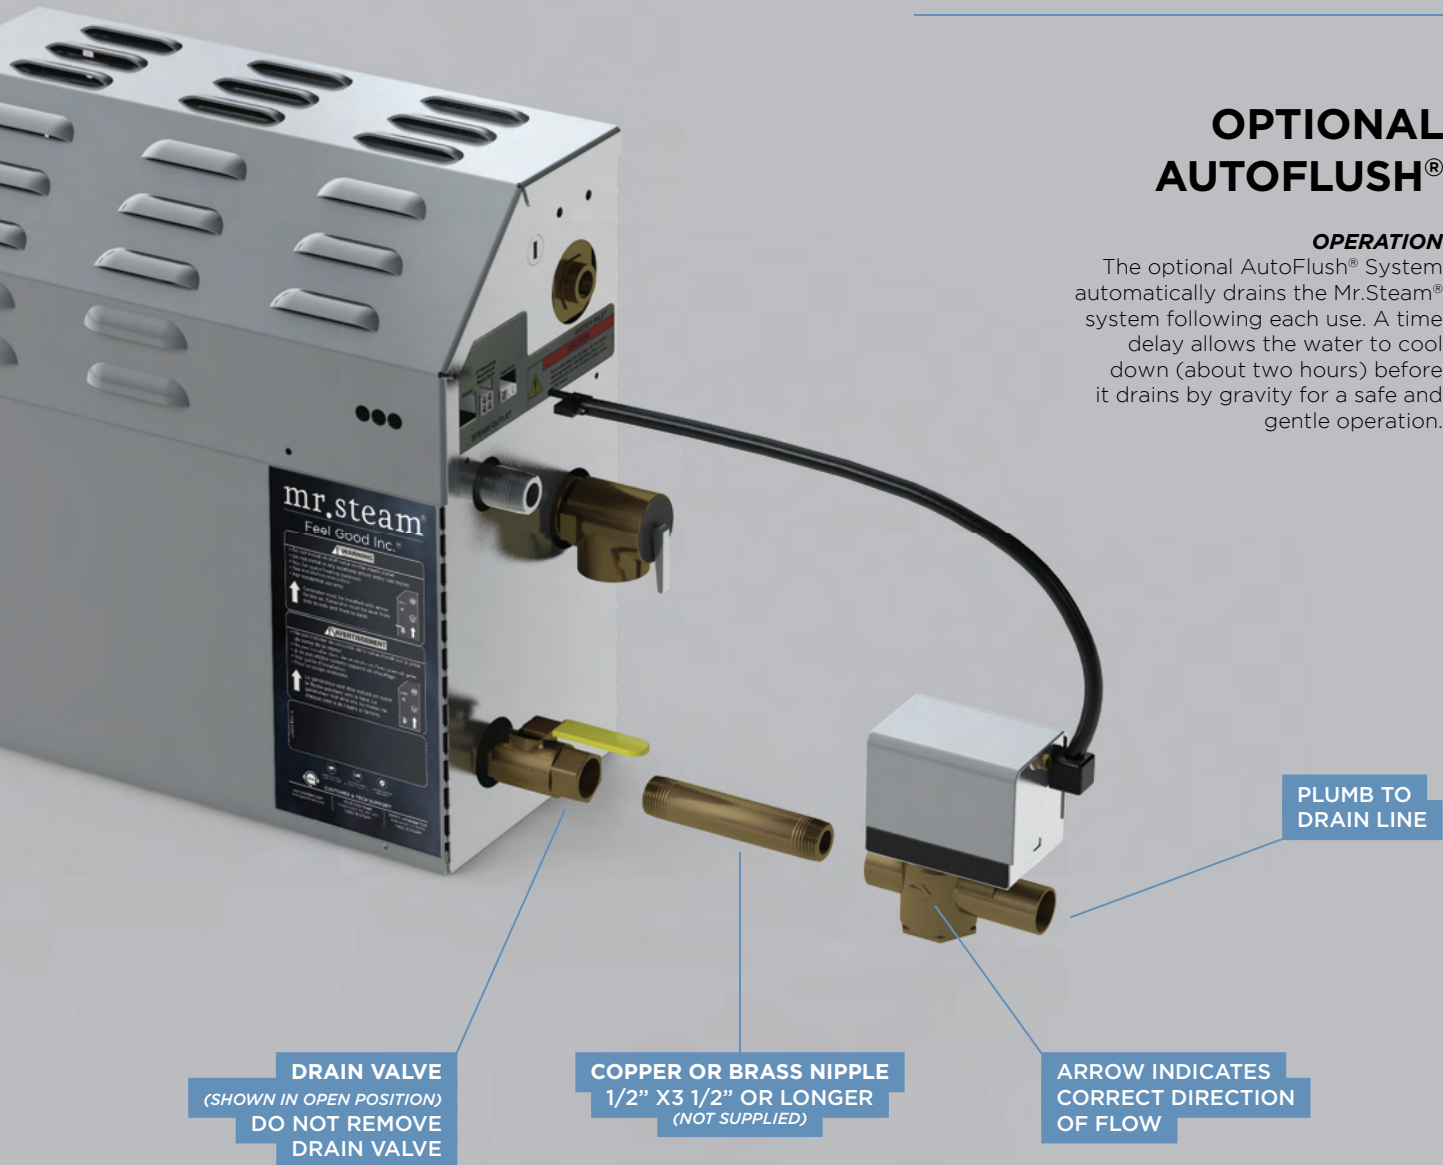


CAUTION: PROVIDE DRAIN PLUMBING ACCORDING TO NATIONAL AND LOCAL CODES. PLUMB AS REQUIRED FOR AUTOFLUSH® SYSTEM.

⚠️WARNING The information in this guide is designed to provide a general overview of how MrSteam® products are installed. All images and diagrams are for illustrative purposes only and may have been altered for presentation purposes. NEVER use this document for the Installation, Operation or Maintenance of any MrSteam® product. For installation, operation and maintenance information and instructions, only use the applicable MrSteam® Installation, Operation & Maintenance Manual(s). The specific Installation, Operation & Maintenance manual that is supplied with each MrSteam® product contains important information required for the safe and reliable installation and operation of the product. Failure to install any MrSteam® product according to the applicable manual may result in property damage or an inoperable or hazardous condition. If you do not have the applicable Installation, Operation & Maintenance manual please contact MrSteam® for a free copy, or download a copy from www.mrsteam.com. If you have any questions about the installation, operation or maintenance of any MrSteam® product please contact a customer or technical service representative using the contact information on the back cover of this guide or consult a properly licensed contractor, architect and/or design professional.

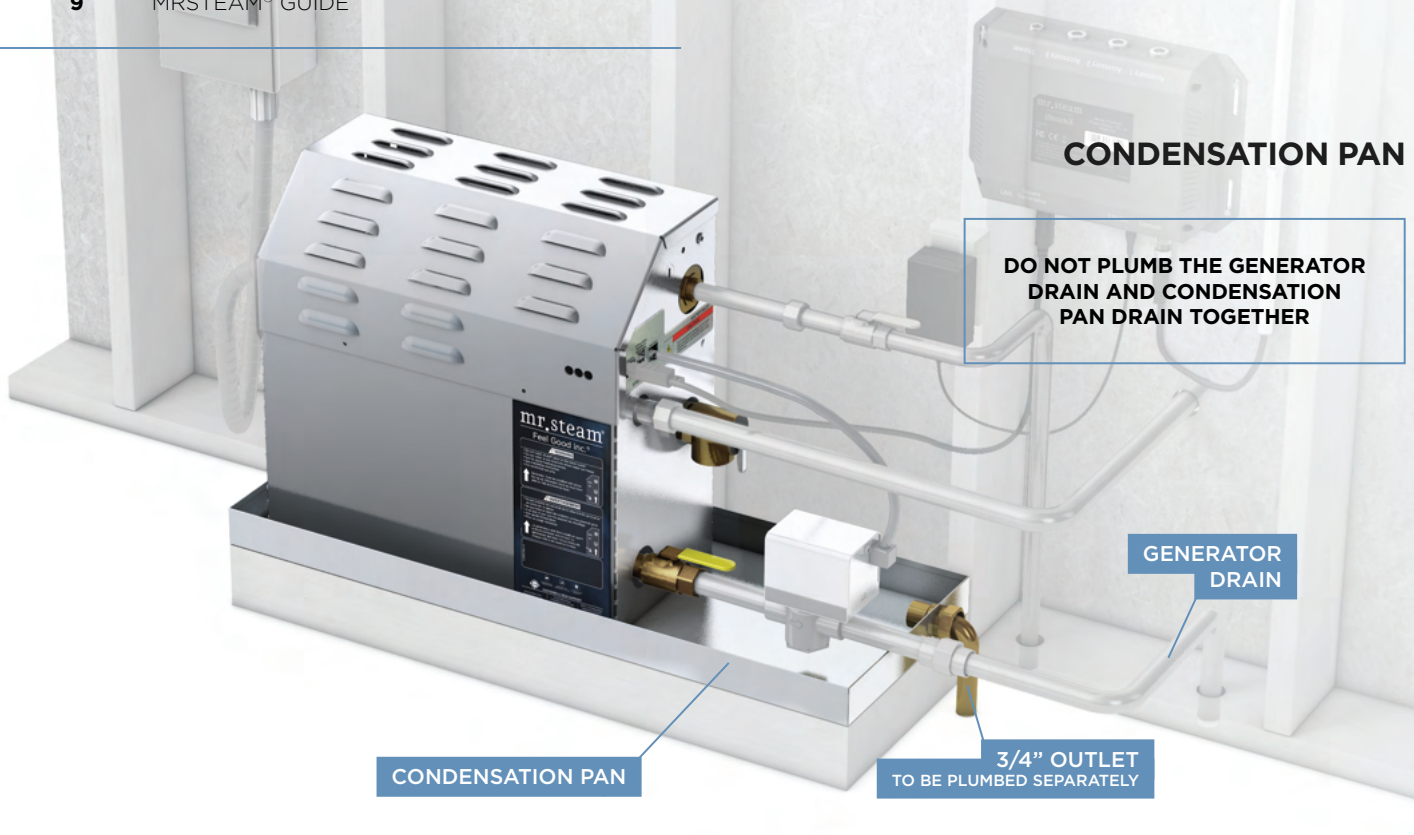

LIQUID LEVEL CONTROL BOARD

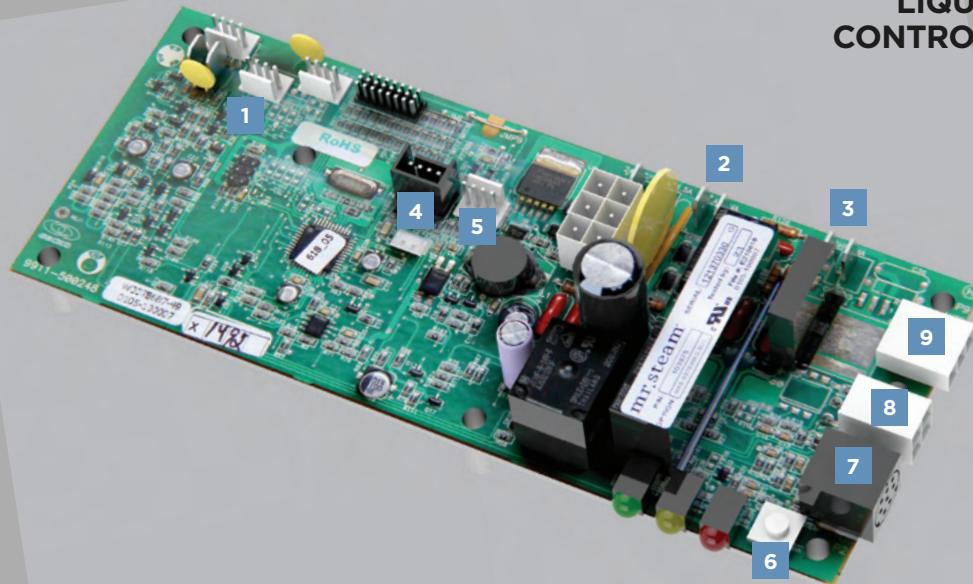

- | | | | |
|----------|---------------------------------------------|----------|--------------------------|
| 1 | SteamLinX A Cable Connection | 7 | Control Cable Connection |
| 2 | AromaSteam 1/4" Spade Terminal Connection | 8 | Home Wizard Connection |
| 3 | Chroma72 1/4" Spade Terminal Connection | 9 | AutoFlush Connection |
| 4 | MSTS (Remote Temperature Sensor) Connection | | |
| 5 | Tandem Connection (for two generators) | | |
| 6 | Test Button | | |


⚠WARNING The information in this guide is designed to provide a general overview of how MrSteam® products are installed. All images and diagrams are for illustrative purposes only and may have been altered for presentation purposes. NEVER use this document for the Installation, Operation or Maintenance of any MrSteam® product. For installation, operation and maintenance information and instructions, only use the applicable MrSteam® Installation, Operation & Maintenance Manual(s). The specific Installation, Operation & Maintenance manual that is supplied with each MrSteam® product contains important information required for the safe and reliable installation and operation of the product. Failure to install any MrSteam® product according to the applicable manual may result in property damage or an inoperable or hazardous condition. If you do not have the applicable Installation, Operation & Maintenance manual please contact MrSteam® for a free copy, or download a copy from www.mrsteam.com. If you have any questions about the installation, operation or maintenance of any MrSteam® product please contact a customer or technical service representative using the contact information on the back cover of this guide or consult a properly licensed contractor, architect and/or design professional.

NEW

MAX STEAM GENERATOR INSTALLATION

(MX 4E, 5E & 6E)

DO NOT INSTALL IN VANITY OR OTHER SMALL SPACES

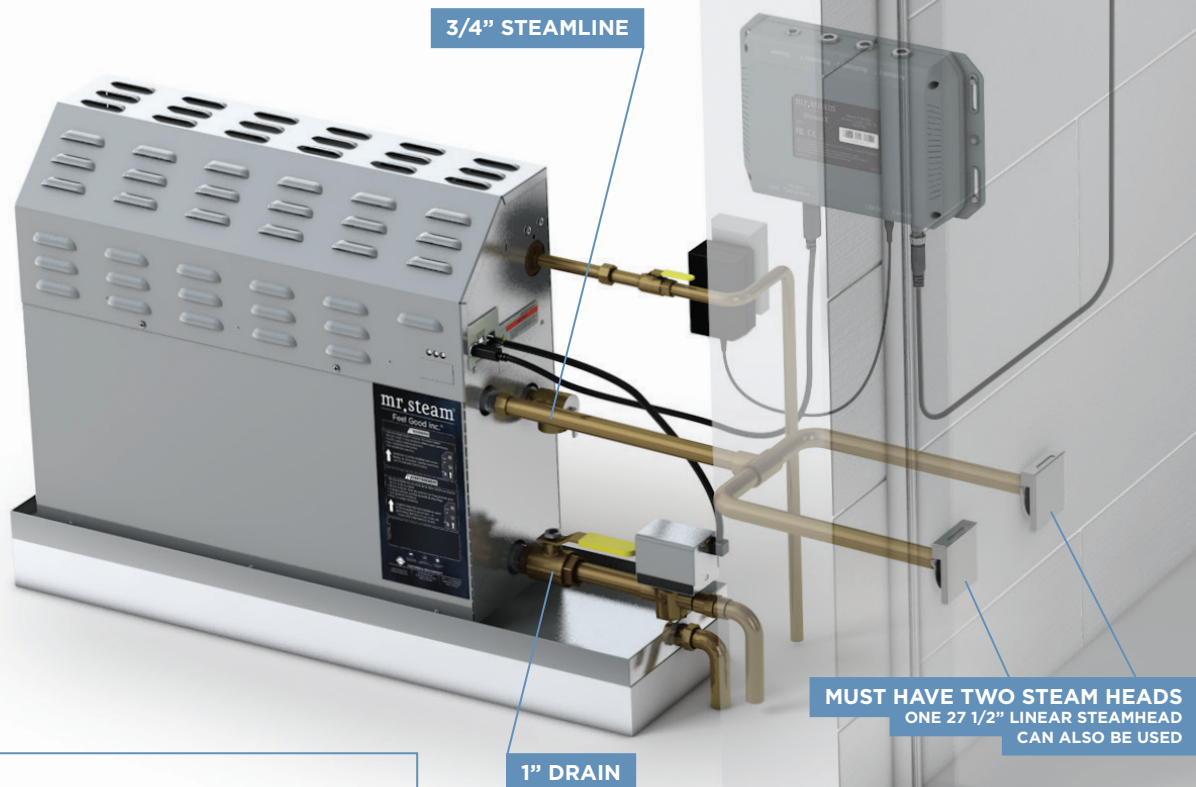

LARGE ROOM CAPACITY MAX GENERATORS REPLACE MS SUPER 4E, 5E, 6E TWO GENERATOR CONFIGURATIONS

Refer to the Mr.Steam MAX Installation manual for additional installation information.

⚠️WARNING The information in this guide is designed to provide a general overview of how Mr.Steam® products are installed. All images and diagrams are for illustrative purposes only and may have been altered for presentation purposes. NEVER use this document for the Installation, Operation or Maintenance of any Mr.Steam® product. For installation, operation and maintenance information and instructions, only use the applicable Mr.Steam® Installation, Operation & Maintenance Manual(s). The specific Installation, Operation & Maintenance manual that is supplied with each Mr.Steam® product contains important information required for the safe and reliable installation and operation of the product. Failure to install any Mr.Steam® product according to the applicable manual may result in property damage or an inoperable or hazardous condition. If you do not have the applicable Installation, Operation & Maintenance manual please contact Mr.Steam® for a free copy, or download a copy from www.mrsteam.com. If you have any questions about the installation, operation or maintenance of any Mr.Steam® product please contact a customer or technical service representative using the contact information on the back cover of this guide or consult a properly licensed contractor, architect and/or design professional.

TYPICAL MS GENERATOR



- | | | | |
|----------|---------------------------------|-----------|------------------------|
| 1 | Contactors | 9 | Safety Valve |
| 2 | Transformer | 10 | Drain Valve |
| 3 | Liquid Level Control Board | 11 | Stainless Steel Tank |
| 4 | Liquid Level Probe | 12 | Water Inlet |
| 5 | Water Feed Solenoid | 13 | Plug & Play Connection |
| 6 | Heating Element | 14 | Element Access Cover |
| 7 | Express Steam Heater (optional) | | |
| 8 | Steam Outlet | | |

For illustrative purposes only. Consult with a qualified designer, architect or contractor for steamroom construction details and proper product placement.

| Product Dimensions* | Model No. | Total Room Volume (cu.ft.) | kW | Amps 240V/1PH | Wire Size AWG‡ | Water Usage Gallons** |
|--------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|----------------------------|-----|---------------|----------------|-----------------------|
|  <p>MS Generators 14 1/2" x 14 3/4" x 6 3/4"</p> | MS90E | 0 to 71 | 5 | 21 | 10 | 0.67 |
| | MS150E | 72-107 | 6 | 25 | 8 | 0.80 |
| | MS225E | 108-161 | 7.5 | 32 | 8 | 1.0 |
| | MS400E | 162-257 | 9 | 38 | 8 | 1.2 |
|  <p>SUPER Generators 17" x 18 1/2" x 7 7/8"</p> | MSSUPER1E | 258-339 | 10 | 42 | 8 | 1.4 |
| | MSSUPER2E | 340-411 | 12 | 50 | 6 | 1.6 |
| | MSSUPER3E | 412-482 | 15 | 63 | 4 | 2.0 |
| NEW  <p>MAX Generators 27 5/8" x 20 3/4" x 7 7/8"</p> | MX4E | 483-678 | 20 | 84 | 3 | 2.7 |
| | MX5E | 679-822 | 24 | 100 | 1 | 3.2 |
| | MX6 | 823-964 | 30 | 125 | 2/0 | 4.0 |

* Dimensions are for generator only, without AutoFlush® or plumbing features.

‡ Wire size (AWG) based on minimum 90 rated THHN copper conductors. Refer to the National Electrical Code for other types of conductors.

** Water usage based on 20 minutes of operation.

**FOR ADDITIONAL INFORMATION ON
CONTROLS AND ACCESSORIES SEE
CORRESPONDING QUICK GUIDES**

⚠WARNING The information in this guide is designed to provide a general overview of how MrSteam® products are installed. All images and diagrams are for illustrative purposes only and may have been altered for presentation purposes. NEVER use this document for the Installation, Operation or Maintenance of any MrSteam® product. For installation, operation and maintenance information and instructions, only use the applicable MrSteam® Installation, Operation & Maintenance Manual(s). The specific Installation, Operation & Maintenance manual that is supplied with each MrSteam® product contains important information required for the safe and reliable installation and operation of the product. Failure to install any MrSteam® product according to the applicable manual may result in property damage or an inoperable or hazardous condition. If you do not have the applicable Installation, Operation & Maintenance manual please contact MrSteam® for a free copy, or download a copy from www.mrsteam.com. If you have any questions about the installation, operation or maintenance of any MrSteam® product please contact a customer or technical service representative using the contact information on the back cover of this guide or consult a properly licensed contractor, architect and/or design professional.

A leader and innovator in residential and commercial steam shower systems, spa products and experiences.

CONTACT US

HEADQUARTERS
MrSteam Corporation®
43-20 34th Street
Long Island City, NY, 11101 USA
tel 1-800-76 STEAM (767-8326)

WEST COAST
MrSteam Corporation®
9410 South La Cienega Blvd
Los Angeles, CA, 90301 USA
tel 1-800-72 STEAM (727-8326)

Or write to us at hello@mrsteam.com

Mr. Steam, Mr. Steam and des., AirTempo, A Lifetime of Pleasure, AromaFlo, AutoFLUSH, Audio@Home, AutoSteam, Broadway Collection, Butler Package, ChromaSound Spa Package, ChromeSteamX, Clean Steam...Every Time, Club Therapy, Day Spa, Digital 1, Express Steam, Etempo, Etempo/Plus, Etempo/Start, Feel Good Inc., Fifth Avenue Collection, From Bathroom to Spa, HomeWizard, iButler, iDream Package, iGenie, iSpa Package, iSteamX, iTempo, iTempo/Plus, Linear, Linear Steamhead, Making Wellness a Way of Life, Metro Collection, Mrsauna, MusicTherapy, MySteam, Spa Package, Steam on Demand, Steam@Home, SmartSizing, Steam in a Box, SteamStart, SteamStop, SteamTherapy, Sussman, Tempo, Tala, The Intelligent SteamBath, Virtual Spa System, and Warmatowel are registered trademarks of MrSteam Corporation.

HomeWizard is a trademark of MrSteam Corporation.

* Please refer to the applicable MrSteam Installation, Operation & Maintenance Manual, at mrsteam.com, for installation, operation and maintenance information and instructions. Failure to do so may result in property damage or an inoperable or hazardous condition. For safety and convenience, consult a qualified contractor, architect and/or design professional.

See product packaging and labeling for important information.

Copyright 2023 MrSteam Corporation. All rights reserved.

PUR100537, Revision 02/2023

mr.steam®



www.mrsteam.com